

# Programming Memory Buttons

## To identify current button programming or the intercom number

1. Press Feature \*0
2. Press a memory button and the current programming will show on the screen. To see the intercom number press the intercom button.

## To Program an External autodial

1. Press Feature \*1
2. Press a memory button.
3. Dial the external number just as you would dial it.
4. Press OK to store the number.
5. Label your new button.

## To Program an Internal autodial

1. Press Feature \*2
2. Press a memory button.
3. Dial the extension number.
4. Press OK to store the number.
5. Label your new button.

## To Program Features

1. Press Feature \*3
2. Press a memory button.
3. Press enter the feature code i.e. Feature\*5
4. Press OK to store the feature code.
5. Label your new button.

## To erase memory buttons

1. Press Feature \*1
2. Press a memory button.
3. Press OK to erase the button